

MINICIG[®]3
MRBT3 - PORTABLE RECHARGEABLE BLUETOOTH SPEAKER

USER GUIDE MRBT 3

SAFETY INFORMATION

WARNING - LISTENING AT HIGH VOLUME FOR A LONG TIME MAY DAMAGE YOUR HEARING

THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO INFORM THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.



SAFETY INSTRUCTIONS - PLEASE READ BEFORE USE

- Never disassemble or attempt to modify the product in any way.
- Do not attempt to submerge the product in water or expose it moisture, water or liquids of any kind.
- Do not drop the product or place the product on its curved side in a location above ground where it may roll and fall.
- Do not cover or restrict ventilation and use only in areas of adequate ventilation with at least 15cm of separation.
- Avoid hot and/or humid environments such as bathrooms, conservatories, cars or in direct sunlight.
- Do not place or install the product near to sources of heat such as radiators or stoves.
- Do not expose the product directly to naked flames, hot surfaces or other apparatus that produce heat.
- The safe operating temperature range of this product is +5°C to +40°C.
- Do not expose the product to objects or forces which may pierce or damage the enclosure.
- For charging, this product requires 0.5A (500mA) at 5V DC. Check USB port power supply specifications before use.
- CAUTION: AC-DC USB power supplies may carry electric shock hazard. Read power supply safety information before use.
- Do not short circuit or connect loads in excess of 1.5A (1500mA) to the power cable USB socket (marked "out") while the cable is connected to the product.
- Do not daisy chain or connect multiple power cables to any single USB socket or USB power supply.
- Do not connect any other load or device to the power cable USB socket (marked "out") while the power cable USB plug (marked "in") is connected to a USB port power supply.
- Do not stress, bend, pinch or force cables in such a way as to incur damage.
- Do not store the product with a low/flat battery or leave the unit unused for a long period of time.
- Do not leave the product permanently on charge.
- Do not use this product near medical devices or on an airplane.
- Refer all servicing and repair to original manufacturer. Servicing is required when the product is damaged in any way such as power-supply cord is damaged, liquid has been spilled or objects have fallen onto the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY

This product contains a non-serviceable rechargeable lithium ion battery. DO NOT attempt to open or disassemble the unit to replace or remove the battery yourself. Please refer to original manufacturer for battery servicing and replacement. Follow safety instructions above carefully. If fluid should leak from the unit or rechargeable battery, do not touch. If fluid comes in contact with eyes, wash thoroughly with water and seek medical advice. Do not rub eyes. If you suspect that the battery is faulty through unexpected behaviour such as not holding charge, please turn off and do not attempt to charge or use the product. Contact the original product manufacturer immediately.

ENVIRONMENTAL

All packaging materials are recyclable, please dispose of in accordance with your local recycling regulations. The product may contain batteries and harmful substances so should not be treated as household waste. Where possible we will repair any faulty units to keep the product operational for as long as possible. If you wish to dispose of the product, please contact the original manufacturer to return it for recycling or for advice on suitable recycling methods.

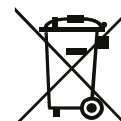

REGULATORY COMPLIANCE STATEMENTS

This product contains a 2.4Ghz radio transmitter and should be used in such a manner that human contact is minimised during normal product operation.

US (FCC)

FCC ID: 2AD65MRBT3

MODEL NUMBER: MRBT3

This equipment complies with FCC radiation exposure limits set forth for portable use conditions.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. No changes shall be made to the equipment without the manufacturer's permission as this may void the user's authority to operate the equipment.

CANADA (ISED)

IC: 12731A-MRBT3

MODEL NUMBER: MRBT3

This equipment complies with the safety requirements for RF exposure in accordance with RSS-102, issue 5, Annex VII for portable use conditions. This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux exigences de sécurité concernant l'exposition aux RF selon la norme RSS-102, 5ème édition, pour des conditions d'utilisation portable. Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

EU (CE)

Hereby, Pasce Ltd. declares that the radio equipment Minirig is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.minirigs.co.uk/compliance

OTHER INFORMATION

WARRANTY INFORMATION

SUPPORT/CONTACT INFORMATION

MANUFACTURER

WWW.MINIRIGS.CO.UK/TERMS-AND-CONDITIONS

WWW.MINIRIGS.CO.UK/SUPPORT

MINIRIGS LTD, UNIT 4 CITY BUSINESS PARK, BS50SP



INDEX

press link to skip to page

 
A WORD FROM US

First of all we want to offer you a big thank you from everyone here at Minirigs for purchasing a Minirig 3 speaker. We have spent years developing this product, making a truly portable speaker without compromising sound. We hope you get years of enjoyment out of it. Don't forget our app unlocks extra features and includes Minirig mixes from international DJs of all genres streamed directly to your phone, from our Soundcloud page. Download the app today for free, from the Google and Apple app stores


UNPACKING

Before you begin, open up the box and check the contents. You should have:


1. MINIRIG 3 SPEAKER

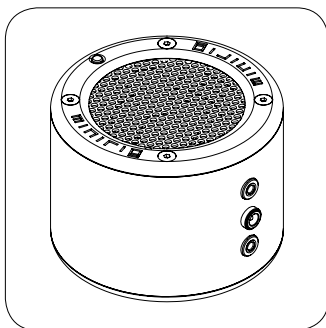


 
2. ZIP CASE FOR THE MINIRIG

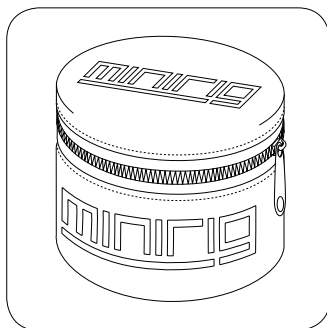

 3. AUX AUDIO CABLE 3.5MM

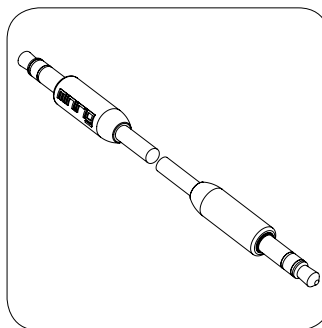

  4. BARREL TO USB POWER

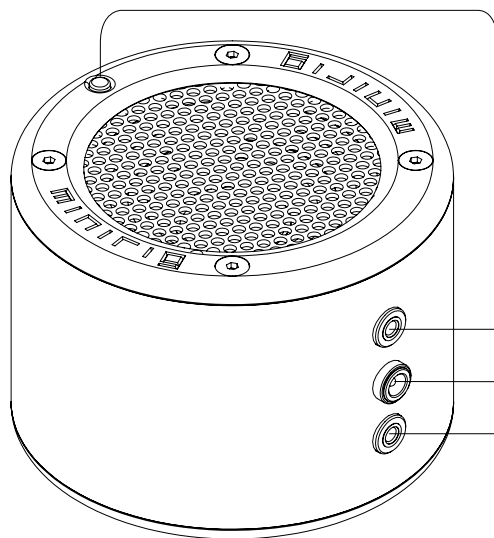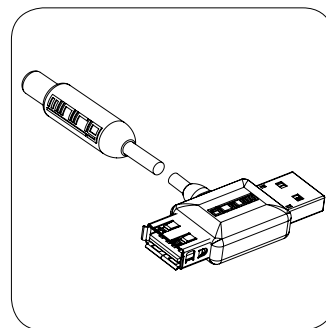

GETTING TO KNOW YOUR MINIRIG 3

BUTTON / STATUS LED Lights up to show status. Multifunctional button to operate the Minirig 3

AUX SOCKET Audio input from audio player or output to another Minirig or subwoofer

POWER SOCKET Plug supplied, insert power cable in here to charge the Minirig 3 or take power out

AUX SOCKET Audio input from audio player or output to another Minirig or subwoofer

TURN ON/OFF

Press and hold the button for 2 seconds to turn the Minirig **on**, you will see the LED turn green and hear a tone momentarily. Finally the LED will settle showing your battery status.

Press and hold the button for 2 seconds to turn the Minirig **off**, you will see the led turn red and hear a tone momentarily.

For more information regarding the battery status see:

 
'CHARGING' or **PRESS HERE**

CONNECT TO BLUETOOTH


Please remove any audio cables before turning your Minirig 3 on.

To connect your audio device with the Minirig 3, they have to be "paired" first.


The Minirig 3 will always be available for pairing as long as it is **on**, in Bluetooth mode, and doesn't have two devices already connected to it. There is no pairing "mode" unlike other Bluetooth speakers, which makes pairing simpler and easier. Follow these steps:

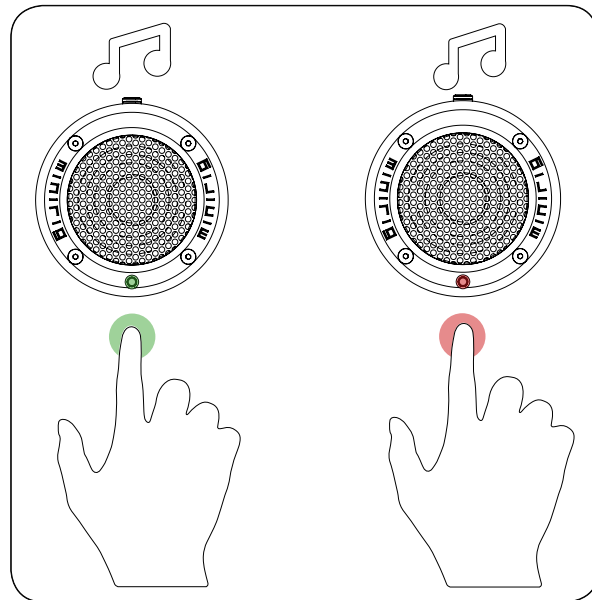

TURN ON BLUETOOTH

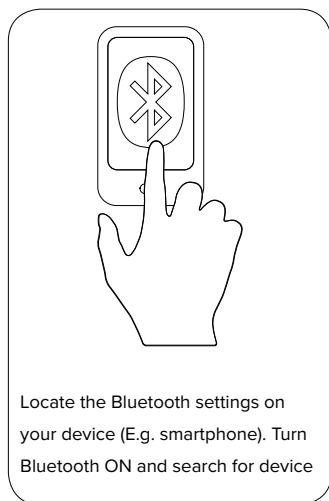 


FIND YOUR MINIRIG

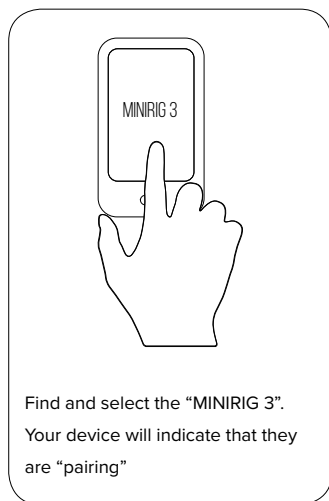 


PLAY SOME MUSIC



 SHARE WITH FRIENDS

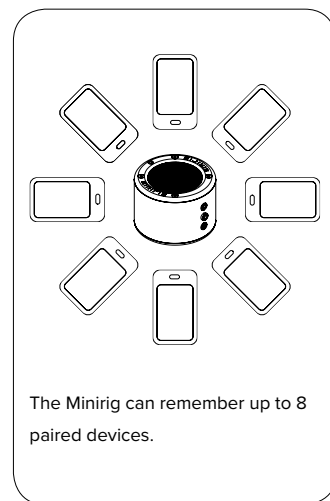


CONNECT TWO DEVICES TO SHARE MUSIC

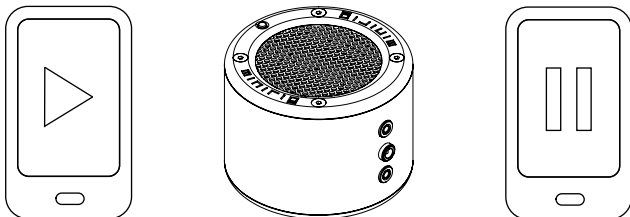 

You can pair and connect two devices to a Minirig 3 at the same time. To switch between them you need to stop the music on the device playing, then start playing music on the second device, or use the Minirig APP.

 
PLUG IN A SUBWOOFER WHEN USING BLUETOOTH

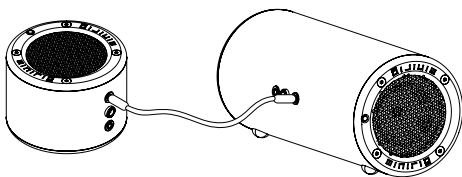



In Bluetooth mode, the Minirig 3 will output audio from both AUX sockets. This allows you to connect to another Minirig, Minirig subwoofer or Hi-Fi system.

 CONNECT AUDIO CABLE

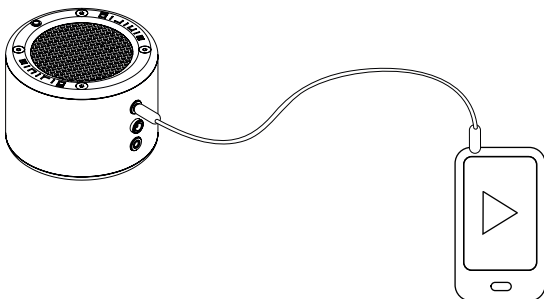If your device does not have Bluetooth or you would like to use a wired connection instead, you can connect to the Minirig 3 using the supplied AUX cable. ensure your minirig is off and remove any audio cables before using cable mode.

 


- Plug one end of the AUX cable into the headphone socket on your audio device.
- Plug the other end into one of the AUX sockets on the Minirig 3.

The Minirig 3 will turn on when you insert the cable displaying the green LED  There will be no tone. when you unplug the cable the Minirig 3 will turn off displaying the red LED  there will be no tone.

Please ensure the cable is pushed all the way in when turning on!

HIGH AND LOW GAIN SETTINGS

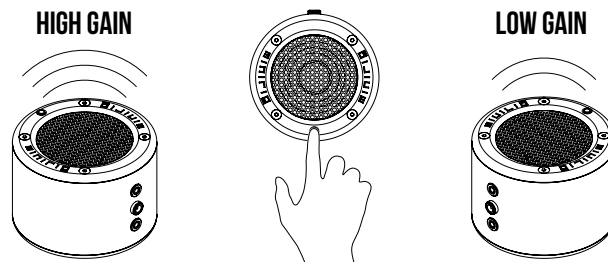


The Minirig 3 has two gain (volume) settings – LOW and HIGH. In Bluetooth mode it will always start in HIGH gain. In AUX mode it will start in LOW gain.

TO CHANGE GAIN AT ANYTIME:

- Check that the Minirig 3 is ON and audio is playing
- Press the button once, do not hold it down
- In high gain the LED will be brighter than in low gain

We recommend that you use LOW gain at normal listening levels for the best sound quality and reduced background noise.

 HIGH AND LOW GAIN IN WHEN USING A CABLE

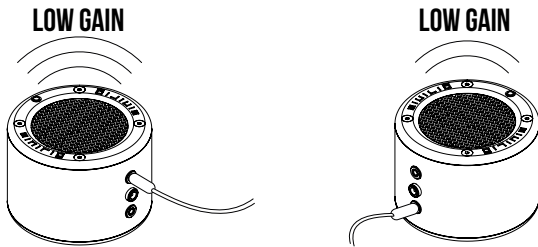


The top socket will put the Minirig 3 in low gain, the bottom socket also low gain. push it in firmly to make the connection. You can change gain using the button as in Bluetooth mode.

You can turn the Minirig 3 OFF and ON by pressing and holding the button. However, it will stay in AUX mode until you remove all the audio cables


In AUX mode, removing the audio cables will also turn the Minirig 3 OFF. Again there will be no tone in AUX mode.

You must do this before you can use the Minirig in Bluetooth mode.

 LINKING UP MINIRIGS

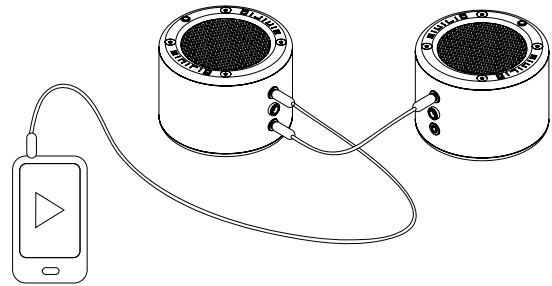


 In AUX mode you can use the spare audio socket to link out to another Minirig or Minirig subwoofer. If using a subwoofer, please feed the audio into the Bluetooth Minirig FIRST as shown below. Ensure that you match the gain levels.

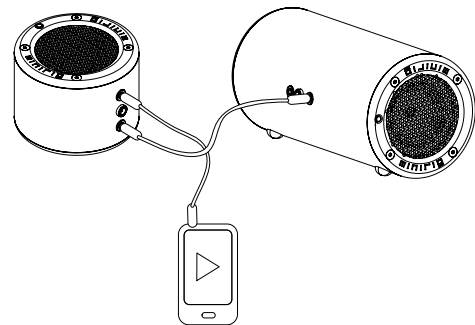


LINKING-UP WITH MINIRIG 3'S & SUBWOOFERS IN CABLE MODE (STEREO)

 Two Minirig 3's can be configured to be in stereo when using cables:

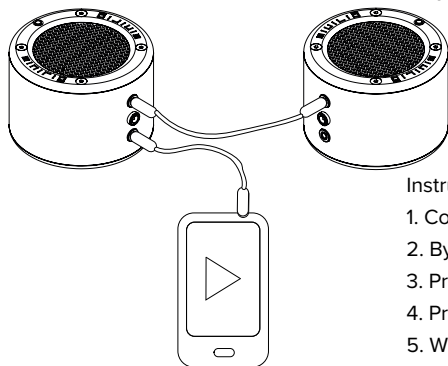

Instructions:

 1. Connect the Minirigs as shown
2. By default, they will both play in Mono
3. Press the button on the first Minirig TWICE to set it to LEFT.
4. Press the button on the second Minirig THREE TIMES to set it to RIGHT.
5. When you turn off the Minirigs, they will always default back to Mono.
6. You can add a subwoofer to the chain, and it will play in MONO (LR mix)

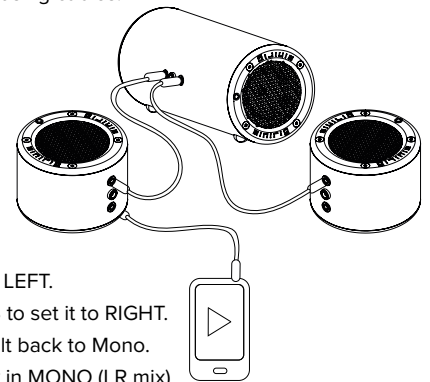

CHARGING

WHEN THE MINIRIG IS ON, THE COLOUR OF THE LED WILL INDICATE THE BATTERY LEVEL.

GREEN: 75-100%

CYAN: 50-75%

 
BLUE: 25-50%

PURPLE: 5-25%


RED: 0%



When the Minirig is OFF you can check the battery status by pressing the button once (do not press and hold). At any time you can charge the Minirig using the supplied power cable

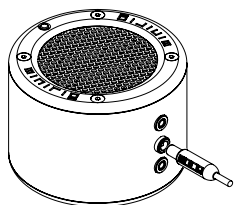

 Plug the round end into the Minirig power socket. Ensure you push it in firmly to make the connection.

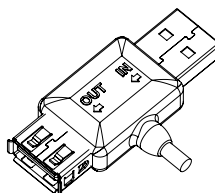

Next insert the USB plug end marked "IN" into any powered USB socket.

USB sockets can be found on most computers and mobile phone chargers.

 
WARNING: only one Minirig or Sub per USB plug

WHEN ON CHARGE, THE LED WILL FADE ON IN A REPEATING 2 SECOND CYCLE. THE COLOUR REPRESENTS THE BATTERY LEVEL.


A FULL CHARGE WILL TAKE AROUND 6 HOURS. ONCE THE BATTERY IS CHARGED, THE LED WILL STOP THIS REPEATING CYCLE.

CHARGE YOUR DEVICES - POWER OUT

Using the supplied power cable, you can take power out of the Minirig to charge or power any device which uses 5V USB power. The Minirig automatically detects when a device is trying to draw power and activates the power output.

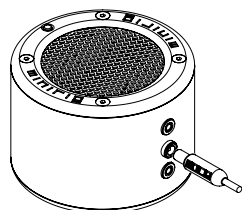

 Plug the round end into the minirig power socket. Ensure you push it in firmly to make the connection.

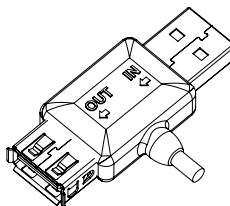

Plug your device's USB charging cable into the Minirig power cable USB socket marked "OUT" Plug your USB charging cable into your device.

 
If the Minirig is off, press the button once to activate the power without turning it on, after a few seconds the power will begin to flow

WHEN ON CHARGE, THE LED WILL FADE ON IN A REPEATING 2 SECOND CYCLE. THE COLOUR REPRESENTS THE BATTERY LEVEL.

A FULL CHARGE WILL TAKE AROUND 6-8 HOURS. ONCE THE BATTERY IS CHARGED, THE LED WILL STOP THIS REPEATING CYCLE.

WIRELESS STEREO PAIRING


Two Minirigs can link up together using the wireless Bluetooth connection. This allows you to create an immersive stereo soundstage or to double up the sound in different areas without any cables.

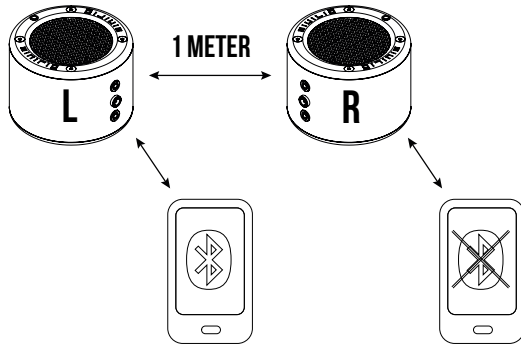


- Turn both Minirigs ON in Bluetooth mode and place them around 1 meter or less apart – they only need to be close for this pairing process.
- Select which one you want to use as the LEFT (master) speaker. You may already be connected and playing music through this Minirig.

It is vital that the other RIGHT (slave) Minirig does not have an audio device connected to it. If it does they will not pair.

 
PRESSING THE BUTTON TO PAIR FOR TWS

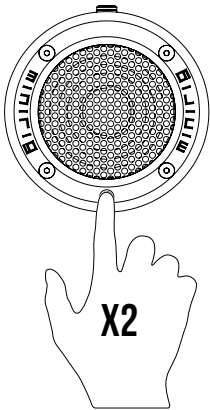

 - Press the button TWICE on the LEFT (master) Minirig. Just press and release both times, don't hold the button. You will hear a “beep beep” tone.

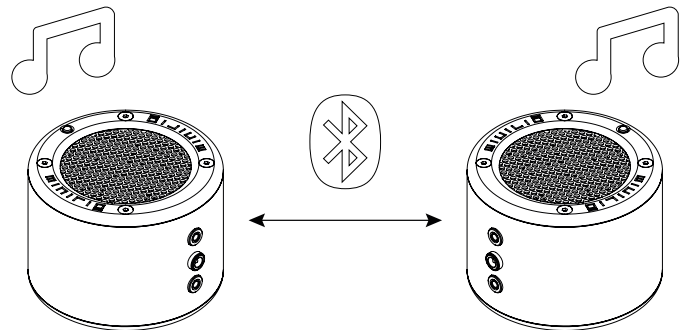


- The Minirig will disconnect from your audio device and start searching for other Minirigs in the area. The LED will flash white and red.
- At any time you can stop the process by pressing the button.
- When it has found another Minirig, that minirig will also start flashing white and red
- After around 10 seconds they should pair. You will hear a “confirmation” tone from both Minirigs and the LEDs will stop flashing.
- If the pairing is unsuccessful or if the search times out, you will hear a different lower “failed” tone. Please try again or see FAQ for assistance.
- Once the Minirigs are paired, go ahead and connect your Bluetooth audio device to the LEFT (master) speaker as usual. If you were previously paired and connected, it should automatically reconnect. In wireless stereo you can only connect one Bluetooth audio device.

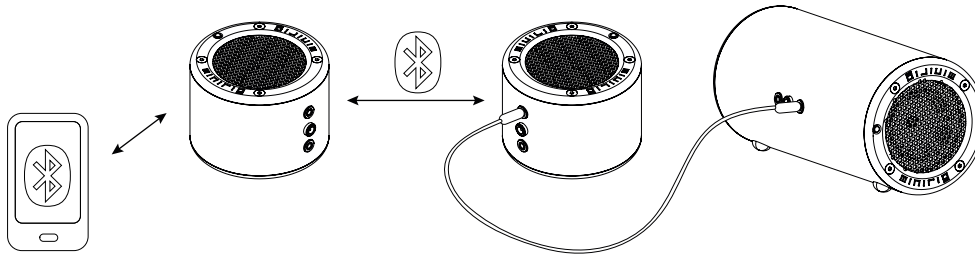 

- Go ahead and connect a Minirig subwoofer to either Minirig if you have one. It will receive both LEFT and RIGHT signals. This can be re-configured using the Minirig APP. See demo videos for more information.
- When you turn one of the paired Minirigs OFF, they will both turn OFF. They will automatically un-pair and return back to normal.
- You can lock them together using the Minirig APP, so next time you turn them on, they reconnect automatically in wireless stereo. See APP instructions for more details.
- At anytime you can also un-pair the Minirigs by pressing the button TWICE on either Minirig. You will hear a tone to confirm they are un-paired.

LINKUP TO OTHER MINIRIG 3 SPEAKERS WIRELESSLY

 (STEP 1) START A LINK-

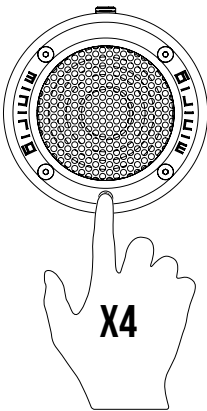


- To start a LINKUP all you need to do is press the button on the Minirig 3 four times, the Minirig 3 will confirm this by beeping four times and flashing blue and white



START THE LINKUP!

Remember there is no limit to how many Minirig 3 speakers you can use in LINKUP mode! all other Minirig 3 speaker will output left/right channels. please resort to the Minirig App for more info.

 (STEP 2) JOIN A LINKUP

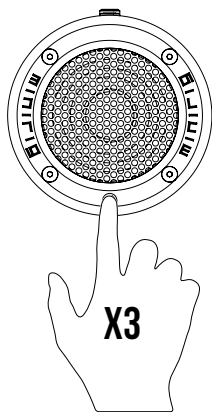

- To join a LINKUP all you need to do is press the button on the Minirig 3 three times, the Minirig 3 will confirm this by beeping three times and flashing green and white



Your Minirig 3 will now linkup with the Minirig 3 that started the LINKUP!

Please resort to the Minirig App for more info.

POWER SAVING FEATURES

To save power, the amplifier circuit will automatically turn off while there is no music playing, even though the Minirig remains ON. In this “standby” mode, a full battery can last up to 14 days in Bluetooth mode or 40 days in AUX mode.

If you are listening to the Minirig at low volumes in AUX mode, please use the low gain setting to ensure the Minirig does not turn off unexpectedly. Alternatively, you can turn this mode OFF using the Minirig App.

In Bluetooth mode, the Minirig will turn OFF completely if there are no devices connected for 30 minutes.

 
TROUBLESHOOTING

We hope that you find the Minirig easy and problem-free to use. However, if you are having any trouble here are a few things you can try which may help:

- Pause/stop the music for 5 seconds and press play again. This can resolve some audio issues.
- Turn the Minirig(s) OFF and ON again. This will re-establish the Minirig connection.
- Try a different AUX audio cable or Minirig power cable if you have one.
- Move the Minirig closer to the Bluetooth audio device.
- Turn Bluetooth OFF and ON again on your Bluetooth audio device.

If you are still having trouble, try a full reset of the Minirig – this will restore it to default and un-pair all devices.

- To reset your Minirig, start with the Minirig OFF and no cables plugged in.
- Press and hold the button. Keep holding it for at least 16 seconds.
- Eventually the Minirig will reset and the LED will turn off. You can release the button now.
- Wait for the LED to illuminate yellow. Press the button once.

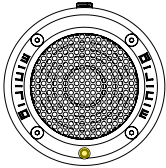

- After around 3 seconds the Minirig and LED will turn off and be ready to use again as normal.
- You will have to re-pair your devices after a reset.
- The Bluetooth name will also be reset to default - "MINIRIG"

If you are still having problem you can visit our support page. Please read our FAQ section and view our demo videos before contacting us.

WARRANTY AND REPAIRS

We hope that the Minirig will never let you down, however if you believe that there is a fault with your Minirig we have a simple and fair warranty and repair service.

If you have been through our FAQ and troubleshooting section and still believe your Minirig is faulty, please contact us through our support page.

Where possible we prefer to repair any faulty products. Our products are made in the UK, so we are in the unique position of being able to fix and repair any of our products quickly ourselves. This also benefits the environment by re-using as many parts as possible, minimising any harmful or non-recyclable waste going to land-fill.

The Minirig is covered by a full 1 year warranty service. Please see our terms and conditions for full details. If your Minirig product is faulty outside of this warranty period please still contact us as usual. We can still repair your product quickly and easily through our fair non-profit repair service.

FOLLOW US BY HITTING THE ICONS



MINIRIG

HOME